
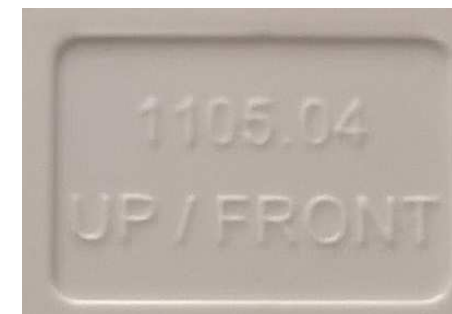


NM0037

Assembly instructions Separation kits

Reference : 1600.70 to 1600.97

Identification of the separators and fitting orientation

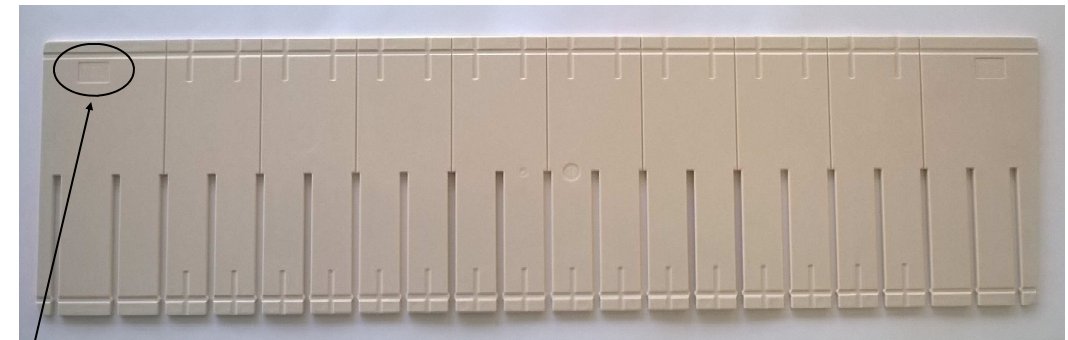


The reference and the fitting orientation are indicated on separators

UP/FRONT = For the depth separators

UP/LEFT = }
UP/RIGHT = } For the width separators


3 LEVELS				
	3 LEVEL KITS	Width separations STINJ0082 1105.05	Depth separators STINJ0083 1105.16	T-square jonction STINJ0090 1105.13
	2 compartments 1600.90	2	3	0
	3 compartments 1600.91	2	2	2
	4 compartments 1600.92	2	3	3
	6 compartments 1600.93	3	2	2
	8 compartments 1600.94	3	3	3
	12 compartments 1600.95	2	3	0
	18 compartments 1600.96	2	5	0
	24 compartments 1600.97	3	5	0

Example of the assembly of a kit 1600.81

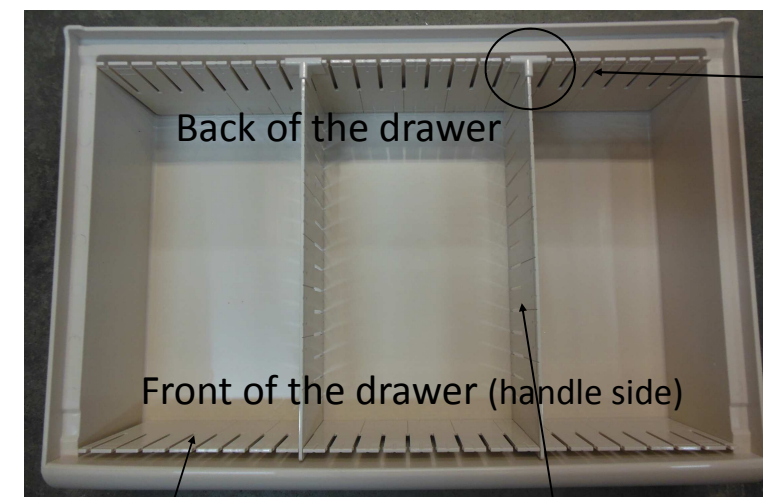


T-square junction

(Always placed at the back of the drawer)

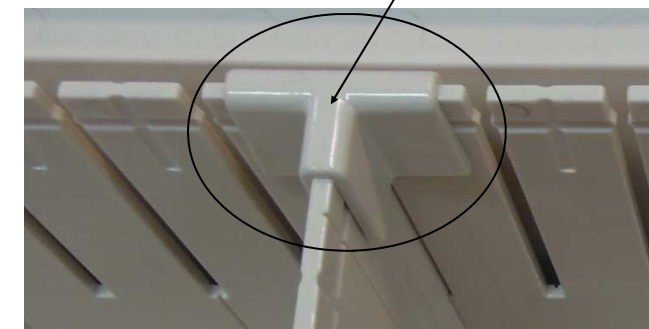

Width separator

Depth separator


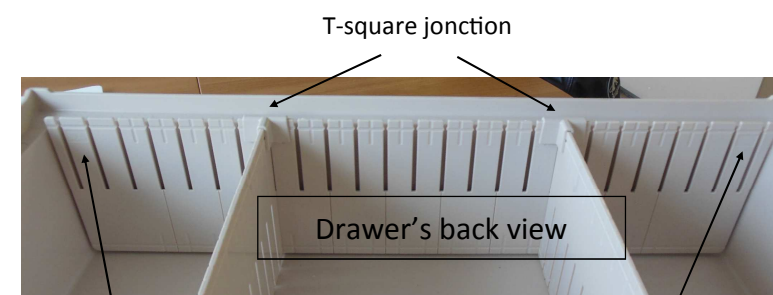










Top left-hand corner

Top right-hand corner



Indication : « UP/FRONT »

1 LEVEL				
	1 LEVEL KITS	Width separations STINJ0078 1105.01	Depth separators STINJ0079 1105.14	T-square jonction STINJ0090 1105.13
	2 compartments 1600.70	2	3	0
	3 compartments 1600.71	2	2	2
	4 compartments 1600.72	2	3	3
	6 compartments 1600.73	3	2	2
	8 compartments 1600.74	3	3	3
	12 compartments 1600.75	2	3	0
	18 compartments 1600.76	2	5	0
	24 compartments 1600.77	3	5	0

2 LEVELS				
	2 LEVEL KITS	Width separations STINJ0080 1105.03	Depth separators STINJ0081 1105.15	T-square jonction STINJ0090 1105.13
	2 compartments 1600.80	2	3	0
	3 compartments 1600.81	2	2	2
	4 compartments 1600.82	2	3	3
	6 compartments 1600.83	3	2	2
	8 compartments 1600.84	3	3	3
	12 compartments 1600.85	2	3	0
	18 compartments 1600.86	2	5	0
	24 compartments 1600.87	3	5	0